
Operating Manual for QRPAY Vend device / UPI Acceptor

<u>Introduction</u>

"QRPay Vend Device/UPI Acceptor is a portable payment device that supports digital payments for all types of new & existing vending machine, gaming machine, and other applications."


Dimension (mm)

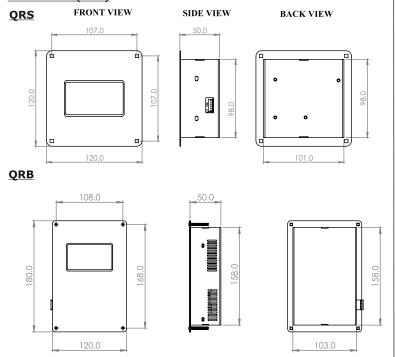

Technical Specification

Model	QRS	QRB	
Interface	Pulse & UART(Optional)		
Power Source	12Vdc		
Power Consumption	Approx. 1A		
Weight in Kg	0.5 Approx	0.6 Approx	

 Wire Connection





Do not Plug-in/ Plug-out the cable or terminals the device while it is ON.

Troubleshooting

If display shows	Causes	Solutions
Device is frequently Restart	 Incorrect SSID / Password. 5GHz frequency band not supported Insufficient current rating 	 Enter correct, SSID / Password. Connect to 2.4GHz. Connect 12Vdc with 1A power supply
QR NOT AVAILABLE	> Inhibit is not connected	 Connect Inhibit line to low or high Check Inhibit connection
NO INTERNET Please connect internet	 Internet not available in your hotspot Device is out of range from network 	 Power OFF and ON the Device Check Internet connectivity Fix the device to nearest network area
HARDWARE 1.2.0 FIRMWARE 1.3.0	Device disconnected from the Wifi / Network	 Power OFF and ON the device Reconnect the internet / Network

Packing List

QRPay device: 1No | Cable: 1 No Mounting Screw: 4 No's

Warranty

This product has passed our strict quality inspection system, So you may rest assured that the quality of this unit will meet our quality standard. If any failure happen during the warranty period, moreover, within the normal operating condition, we will be responsible for repair service free of charge. We guarantee this unit for a period of one year after the date of the invoice.

The following conditions exempt us from our repair service free of charge.

- · Misuse, improper use or neglect by the user.
- · Failure happens because of not using original parts furnished by us on repairing this unit yourself.
- \cdot Failure from any water damage.
- · Failure or damage by inevitable accident.
- · Using this unit under abnormal condition.
- \cdot Using this unit beyond the working range.
- · Failure or damage is caused by the failure of machine tool itself.
- · This warranty is effective and valid only in India.
- · This warranty is void if without our company stamp.

This product has undergone the strict quality inspection before delivery and complying with our quality control standard.

Customer:

Invoice No: Date: Model Serial No:



Step:1 if shows "Booting Device..1s" Device is ready to connect internet

Step:2 Turn on the Wifi on your smart phone and select the AALROOT_QRXXXX

<u>Step:3</u> Enter the password "5432167890" and "Connect"

Select the "Configure WIFI"

Step:5 Select your SSID(Hotspot) and Enter the Password and "Save"

Step :6 After save the display Shows "WIFI Connected" and Internet Connected" Now the device is ready

https://youtu.be/eCibyz1osNU for demo videos